

260

for curved staircases

Directional Controls

Mounted on either arm of the chair, the low pressure buttons (or optional joystick) will operate the stairlift in the required direction of travel. For safety the chair will only move while the button is pushed.

Armrests

Sturdy armrests are provided to help ease you comfortably in and out of the chair. The armrests fold up when not in use.

Key Switch

A key switch may be used to turn off the stairlift if, for instance, young children are around.

Rail

The stairlift travels along a narrow rail, which is custom-made to suit your needs and your staircase. The rail stands on legs which attach to the stair treads, not the wall.

Footrest Lever

Easily folds the footrest. May also be used from the seated position.

Seat belt

A retractable lap-belt is fitted as standard. Other styles are available.

Safety Edges

Nine sensitive safety edges immediately stop the stairlift if it meets an obstruction.

Remote Controls

Wireless controls on the wall at both ends of the staircase allow the stairlift to be moved to where it is needed. You can even send laundry or groceries on the chair.



The Stannah 260 easily negotiates nearly all types of staircases, even those with unusual corners, twists or turns. The slim profile of the chair and rail leave plenty of room for others to use the stairs.

The rail is attached to the staircase only (no wall attachments or construction modifications required). Our versatile design enables you to choose which side of the staircase works best for you. You can also specify just where you want the stairlift to start and finish. All our stairlifts are equipped with a swivel seat, which means you get off the lift comfortably and safely. We also have an optional automatic swivel which provides added convenience.

Stannah and safety have always been synonymous. Every Stannah stairlift has a braking device as standard equipment; you are always safe on a Stannah.

Take the worry off the stairs with a Stannah 260. It's just the lift you need.

Swivel Levers

Swivel levers on either side allow the seat to be turned to face onto the top landing for safety. (Optional powered swivel available).

Batteries

Two standard 12 volt batteries allow the stairlift to operate in the event of a power outage. They also give a smooth, quiet ride.

Folding Seat


The seat, armrests and footrest fold up to leave the staircase clear for walking.



Visit our website at www.stannah.com

260

we're just the lift you need

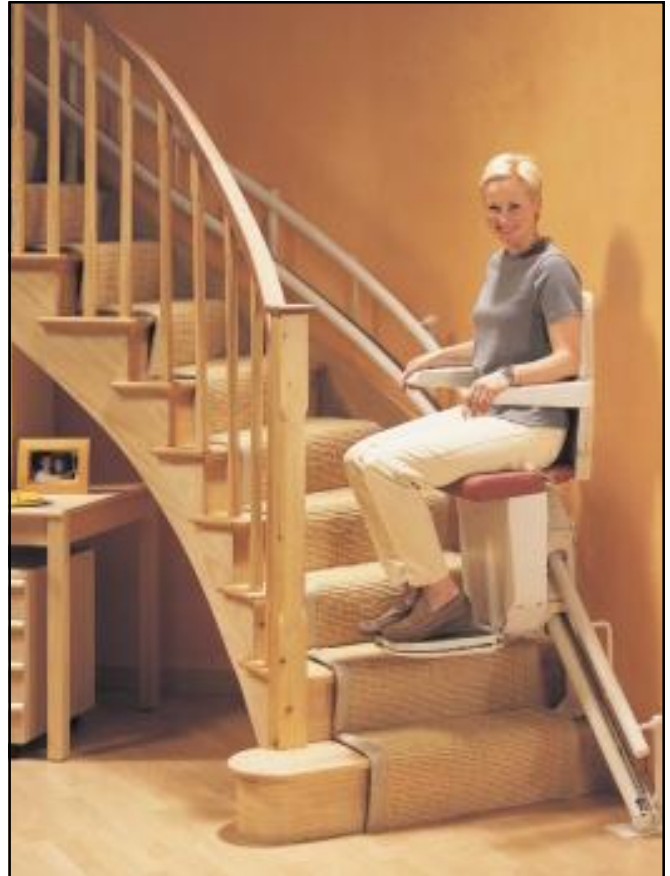

Because the Stannah 260 is attached to the stair treads, it may be mounted on either side of the staircase.

REQUIREMENTS

Minimum staircase width 29"

Maximum user weight 265 lbs.

Power outlet 110 Volt

Wall construction No wall is needed. The rail attaches to the stair treads.

Contact



Design, manufacture and installation: Stannah model 260 and components have been tested and approved to BS 5776 1996, CSA, TUV, DLI, EU Type Approval to Machinery Directive 98/37/EC. Low voltage Directive 73/23/EEC and EMC Directive 89/336/EEC. Conforms to or exceeds ASME standards in the USA.

Our company policy is one of continuing product improvement. We therefore reserve the right to alter the specifications and to change and improve the design at any time. Full operating instructions are supplied for all products.



Visit our website at www.stannah.com